

redo::lyser



redo::lyser monitors ORP and temperature

redo::lyser pro: high temperature range

- s::can plug & measure
- measuring principle: unique, non-porous / non-leaking combined reference electrode for technically unrivalled and consistend ORP performance
- multiparameter sensor
- ideal for surface water, ground water and drinking water, also waste water
- long term stable and maintenance free in operation
- factory precalibrated
- mounting and measurement directly in the media (InSitu) or in flow cell
- operation via s::can terminals & s::can software
- plug connection or fixed cable

recommended accessories

part number	article name
D-330-xxx	con::cube V3
D-320-xxx	con::lyte
C-1-010-sensor	1 m connection cable for s::can physical and ISE probes
F-12-sensor	carrier s::can physical probes
F-45-four	flow cell for four s::can physical probes
F-46-four-iscan	i::scan flow cell for up to 3 additional s::can probes
F-45-sensor	flow cell for s::can sensor
S-11-xx-moni	moni::tool Software

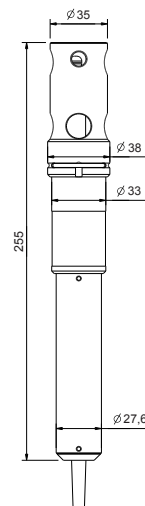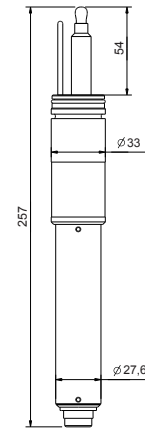

technical specification

measuring principle	potentiometric	weight (min.)	400 g
measuring principle detail	combined, non-porous reference electrode	dimensions (Ø x l)	33 x 257 mm
resolution	1 mV	operating pressure	0 ... 10 bar
accuracy (standard solution)	+/- 10 mV	installation / mounting	submersed or in a flow cell
response time (T90)	30 ... 0 sec.	process connection	quick connect
integrated temperature sensor	0 ... 90 °C	flow velocity	0.01 m/s (min.) 3 m/s (max.)
integration via	con::lyte con::nect	automatic cleaning	media: compressed air permissible pressure: 3 ... 6 bar
power supply	9 ... 18 VDC	storage temperature (electrode)	-5 ... 30 °C
power consumption (typical)	0.8 W	storage temperature (sensor)	-10 ... 60 °C
power consumption (max.)	1 W	conformity - EMC	EN 61326-1
interface to s::can terminals	sys plug (IP67), RS485	conformity - safety	EN 61010-1
cable length	7.5 m fixed cable (-075) or plug connection (-000)	operating temperature (eco)	0 ... 70 °C
housing material	stainless steel 1.4404/1.4401, POM-C	operating temperature (pro)	0 ... 90 °C
		protection class (-000)	IP67
		protection class (-075)	IP68

measuring range

		parameter		
		redox [mV]	temperature [°C]	part number
redo::lyser eco (ORP, temp)	min.	-2000	0	E-513-2-000 / -075
	max.	2000	70	
redo::lyser pro (ORP, temp)	min.	-2000	0	E-513-3-000 / -075
	max.	2000	90	